


- NOTES:
1. ATTACH NAILER TO DECK WITH SUITABLE FASTENERS
 2. TOP LAYER OF INSULATION CAN BE EITHER THERMAL INSULATION OR COVERBOARD INSULATION.
 3. WHEN POSSIBLE, THE MECHANICAL UNITS SHOULD NOT BE SET UNTIL THE ROOF MEMBRANE AND FLASHING HAVE BEEN INSTALLED.

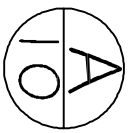

VENT CURRB

PROJECT TITLE :

ROOF RECOVERY

2014

JOB NO.,	
DRAWN BY :	
CHECKED	
SCALE	
DATE	8/7/2014
CAD FILE	
SHEET	

DRAWING NO.

4010